 
 


Part No. 49217
Revised: June 2004

6 oz. Kettle Poppers

With / Love My Popper Kettle
Popcorn Machine Instruction Manual
Models: 1871,2660,2661

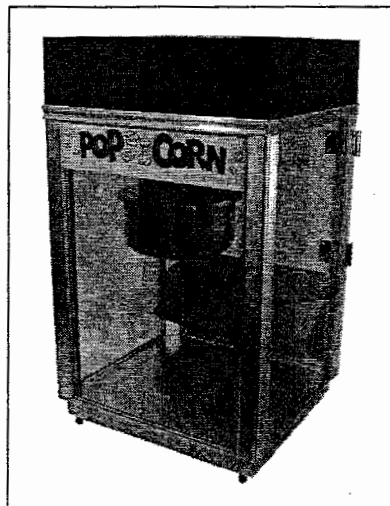

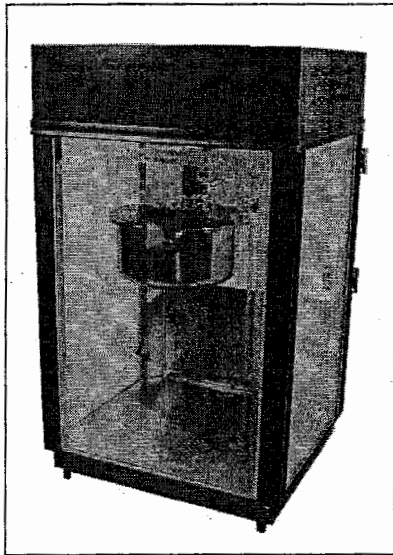

 **GOLD MEDAL®**


FUNFOOD EQUIPMENT & SUPPLIES


Cincinnati, OH 45241-4807 USA


SAFETY PRECAUTIONS


	⚠ DANGER
	Machine MUST be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing. Do not use excessive water when cleaning.

	
	To avoid serious burns, do NOT touch the kettle while it is hot.

	
	ALWAYS wear safety glasses when servicing this equipment.

	
	Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.

	⚠ CAUTION
	This equipment is sold for commercial use only. This equipment is NOT to be used by the general public for home use. Do NOT allow direct contact with this equipment and the general public when used in food service locations. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation instructions before operating the equipment.

	⚠ CAUTION
	This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION INSTRUCTIONS

INSTALLATION

Your new 6 oz. popcorn machine is completely assembled. Remove all Packing material and tape before starting operation.

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

There are three switches on the popper.

LIGHT AND WARMER SWITCH

Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH

Turns on the motor which drives kettle agitator shaft.

KETTLE HEAT SWITCH

 
Turns on the heat element

AMOUNT OF POPCORN AND OIL

Your new popper is equipped with a six ounce (177 ml) corn measure cup. We recommend flavored and colored coconut oil. Popcorn popped in coconut oil stays fresh longer. Coconut oil does not leave black deposits in your kettle like other oils.


Corn charge-- 6 oz. (177 ml)
Oil charge - 1.6 to 2.0 oz. (60 ml)
Flavacol - 1 tablespoon (8 cc)

POPPING INSTRUCTIONS

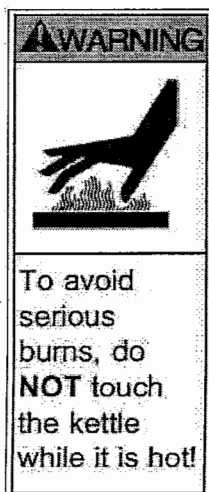

1. Turn KETTLE HEAT and KETTLE MOTOR switch ON.
2. Make test pop by putting 3 kernels of corn and 1 oz. (30 ml) of oil into the kettle.
3. When the 3 kernels have popped, load kettle with corn and oil charge.
4. When corn has popped, dump kettle.
5. Repeat cycle starting with Item #3; always pop 3-5 batches for best popcorn.

CARE AND CLEANING

	▲ WARNING
	Unplug your machine before cleaning glass panels or case. Never immerse the kettle in water, this will ruin the electrical components and automatically void the warranty.

Each time you finish a series of poppings, allow the kettle to cool down, and wipe the outside of the kettle with a soft cloth to remove any oil drippage on the outside of the kettle. After you finish popping for the day, allow kettle to cool until it is not too hot to handle, but still warm. Unplug kettle and remove it from the machine. With a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle.

Cleaning the cabinet of your machine is easy. Take a clean cloth and wipe excess grease from the glass. Wipe the outside of the machine also.

NOTE: Never use a glass or plastic cleaner that contains ammonia. It will crack the plastic on the machine.