 


# Projection System Set Up Instructions

Turn red knobs to remove front cover. Once front cover off, remove top cover.




Plug in power strip located in bottom of A/V box.

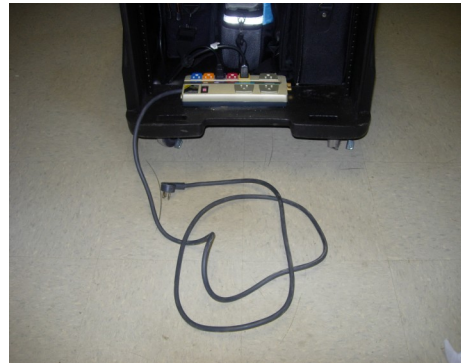

Remove projector shelf, rotate 90 degrees and place on top of rack. Face projector away from front panel.



Turn dvd or gaming system on. Plug in audio RCA jacks into amplifier.

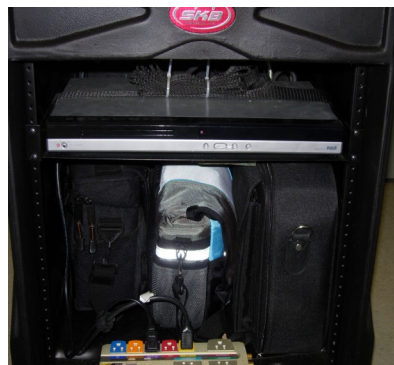

If using Wii or other gaming system, plug yellow RCA plug into yellow RCA jack on back of projector. Plug gaming unit into power strip.



Turn on dvd or gaming unit then turn on projector.



All extra cables, patch cords and remotes located in black bag in bottom of A/V storage box.



Position projection system 18-20 feet away from movie screen. Reverse image if using rear projection. Press “menu” button on projector remote. Select “management”. Arrow down to “projection”. Arrow over until image reversed. Select enter and then exit menu.